



SQUBE on base 1.0

INSTALLATION INSTRUCTIONS | DECEMBER 2022




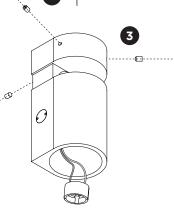



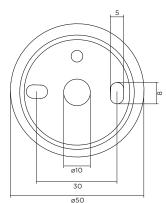





DIMENSIONS






0 LED

MOUNTING INSTRUCTION

- 1 Remove the socket screws, put the cables through the opening and mount the base on the ceiling with screws (screws are not included).
- 2 POWER CONNECTION

Connect to 220-240V.



Connect the ceiling base earth cable.





- 3 Mount the fixture with the socket screws on the base.
- 4 For PAR16: mount the lamp.

PB19-010-438-00_v

SQUBE on base 1.0

INSTALLATION INSTRUCTIONS | DECEMBER 2022

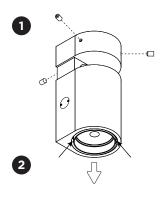

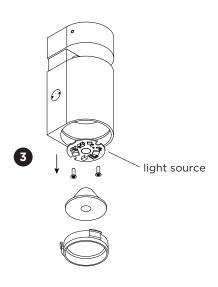



- Remove the fixture from the ceiling by loosening the socket screws and wires.
- 2 Push on the sides of the plastic ring and pull it out.
- Take the lens out and unscrew the light source.



The light source is replaceable by an authorized professional.

For advice contact your Wever & Ducré customer service contact point.



This luminaire contains a light source with the energy class F.